GUÍA DE INSTALACIÓN

SOFT ROLL-UP TONNEAU COVER

Sistema enrollable para pick-up trucks



XRC COVER

SYSTEMS

100%
ACCESO A LA TINA

200 LB
CAPACIDAD ESTÁTICA

90 MIN
INSTALACIÓN APROX.


IP
PROTECCIÓN TODO CLIMA


XRC S COVER


Components


#1 F	Clamps X4
#1 D1	T-Bolts X4
#1 D2	M6 Washers X4
#1 D3	M6 Lock Washers X4
#1 D4	M6 Lock Nuts X4
#1 H1	M6 Flathead Bolts X2
#1 H2	M6 Allen Key X1
#1 E1	M8 Allen Key X1
#1 E3	Rubber Grommets X4
#2 K1	Driver-siderail
#2 K2	Passenger-siderail
#3 L	Cover assembly
#4 N1	Foam Roll X1

CAUTION: Over torquing hardware may damage components.

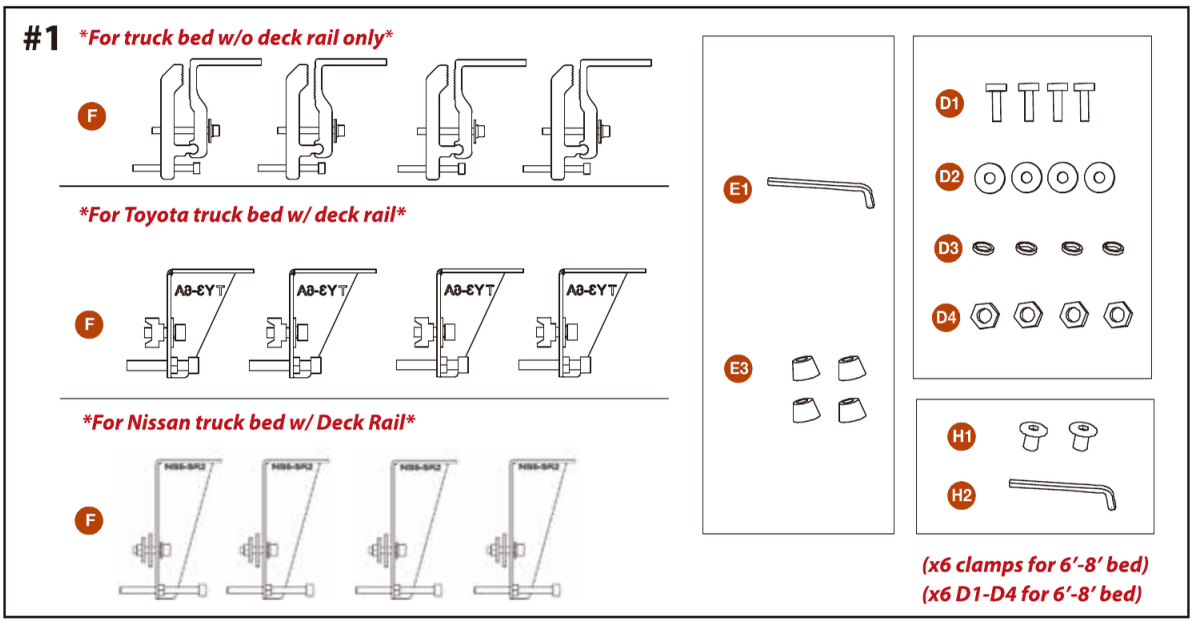

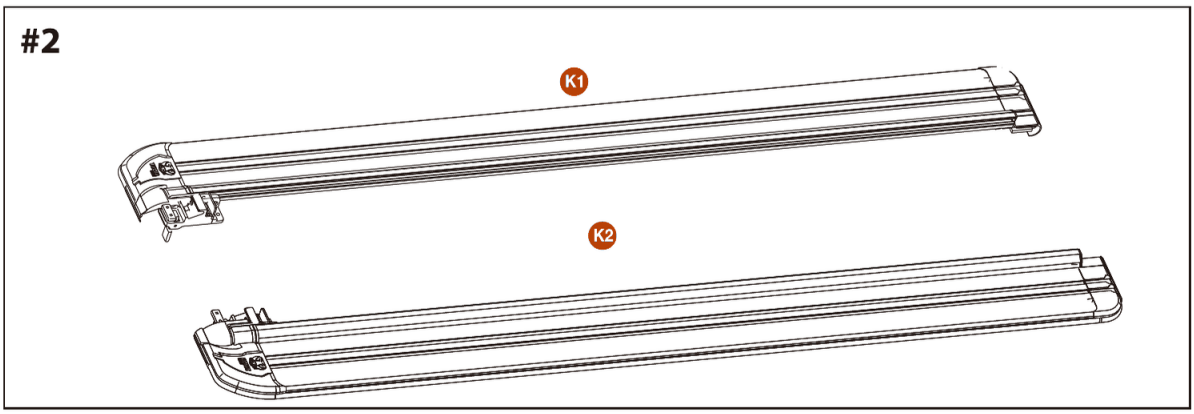

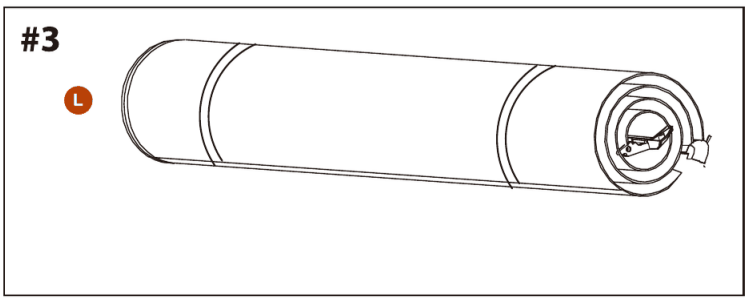

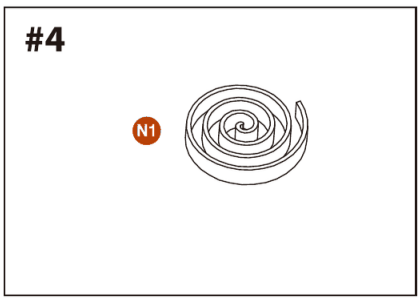


P1

STEP 1 Apply weather stripping to the Bulkhead

Ensure that the Foam Roll (**N1**) are tightly affixed together without gaps.

Note: Skip this step for 2016-2023 Toyota Tacoma.

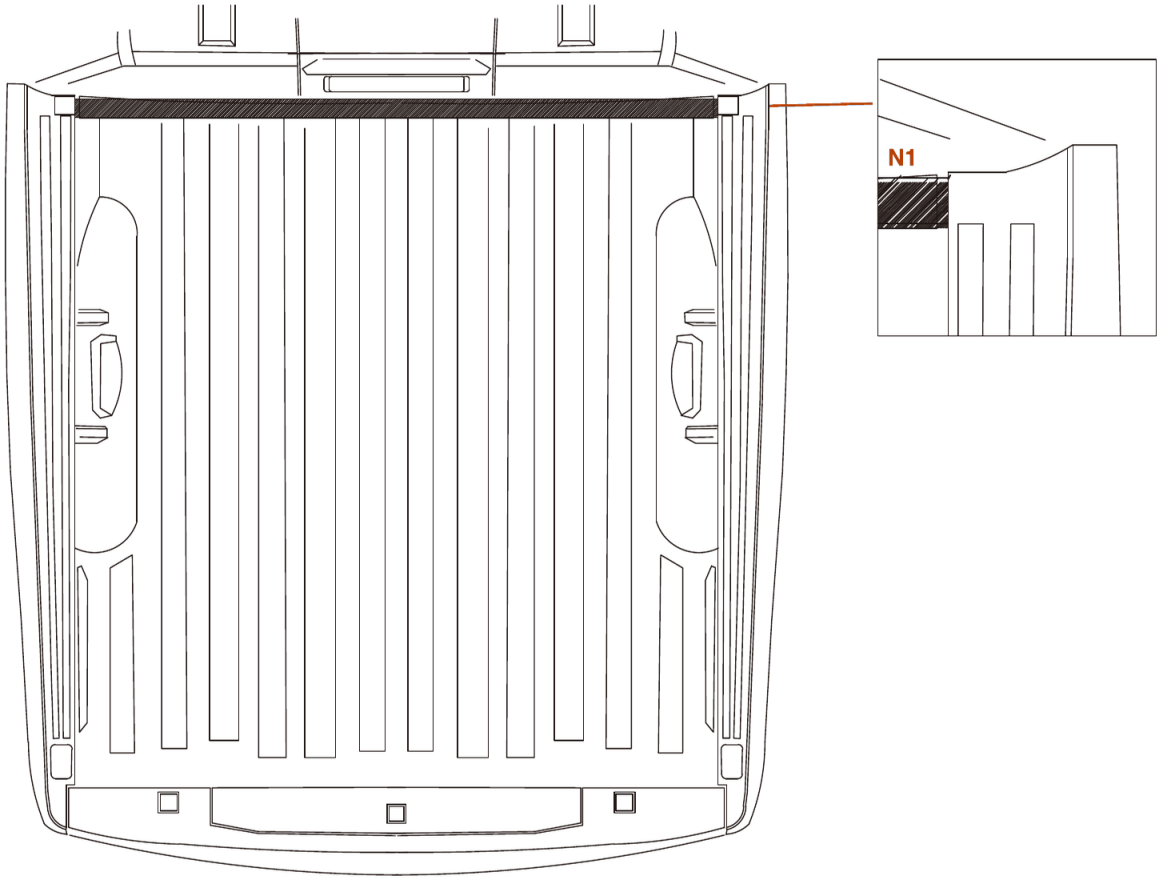

STEP 2 Install the Clamps F

For truck bed w/o deck rail only

1. Install Clamp **F** onto the bed flange. Use two clamps on each side and space them evenly.

2. Align Clamp **F** flush with the top edge of siderail **C**.


Secure the center bolt using Allen Key **E1**.

Install Rubber Grommet **E3** onto the lowest stabillizing screw and tighten.

3. Position clamp 4MM lower than bed siderail.

Secure center bolt using Allen Key **E1**.

Install Rubber Grommet **E3** onto the lowest stabillizing screw and tighten.

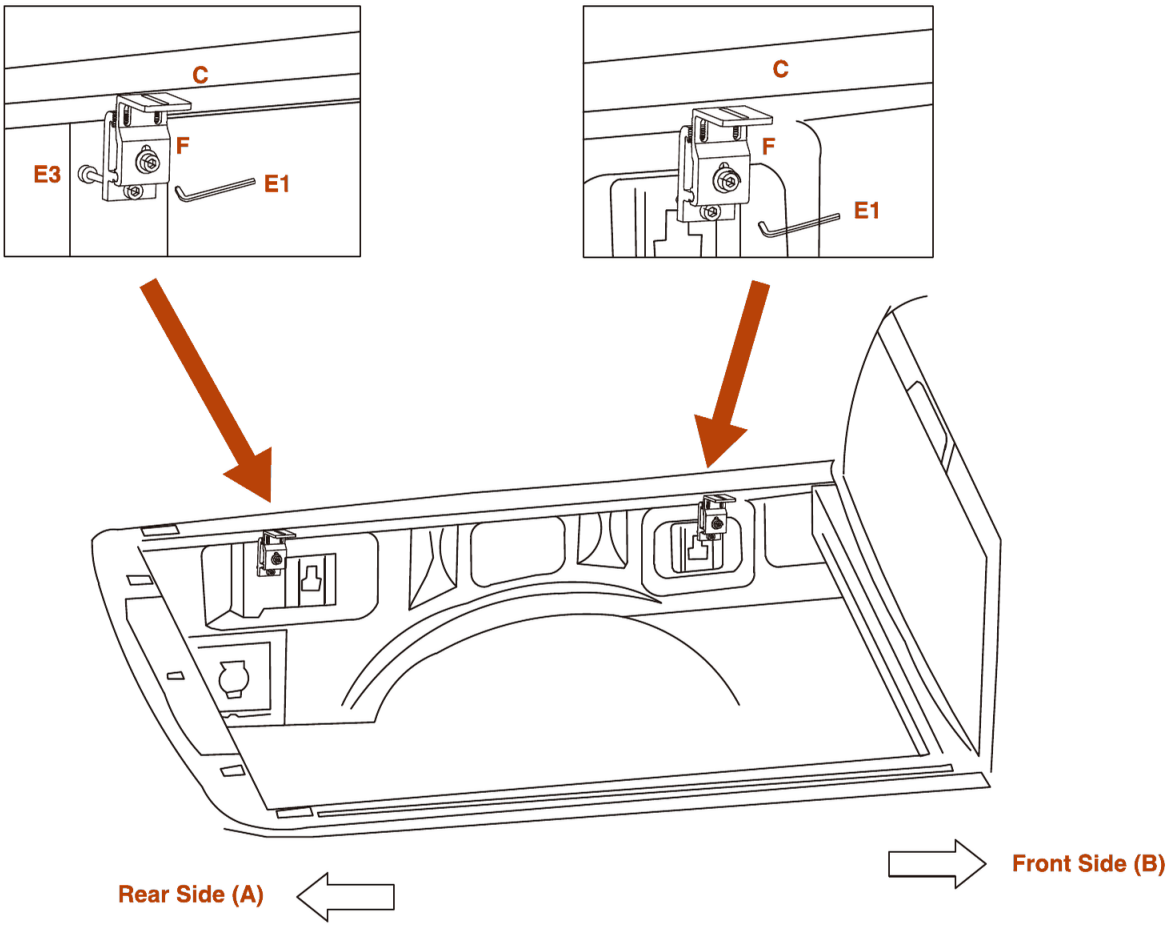

For Toyota truck bed w/ deck rail

1. Install Clamp **F** onto deck rail. Use two clamps on each side and space evenly.

2. Detach T-Slot Nut from bracket and insert (2) into each factory rail.

3. Align Clamp **F** flush with the top edge of siderail **C**.


Secure the center bolt using Allen Key **E1**.


Install Rubber Grommet **E3** onto the lowest stabillizing screw and tighten.


4. Position clamp 4MM lower than bed siderail.


Secure center bolt using Allen Key **E1**.

Install Rubber Grommet **E3** onto the lowest stabillizing screw and tighten.

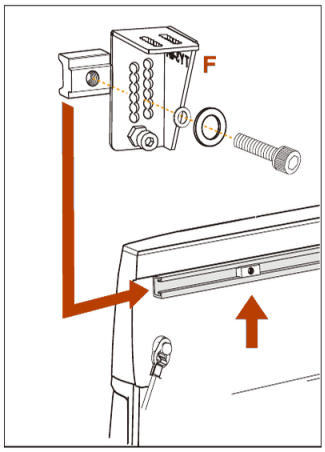

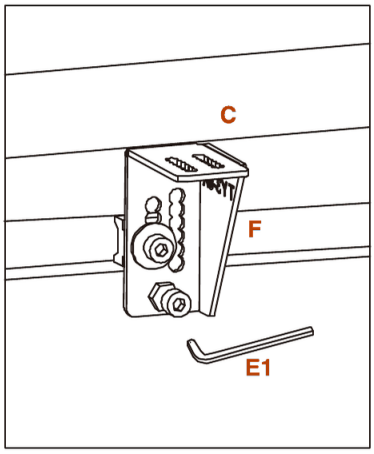

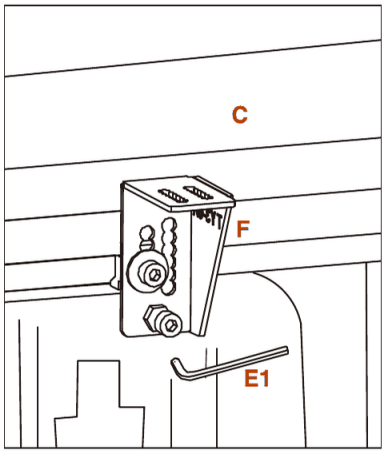

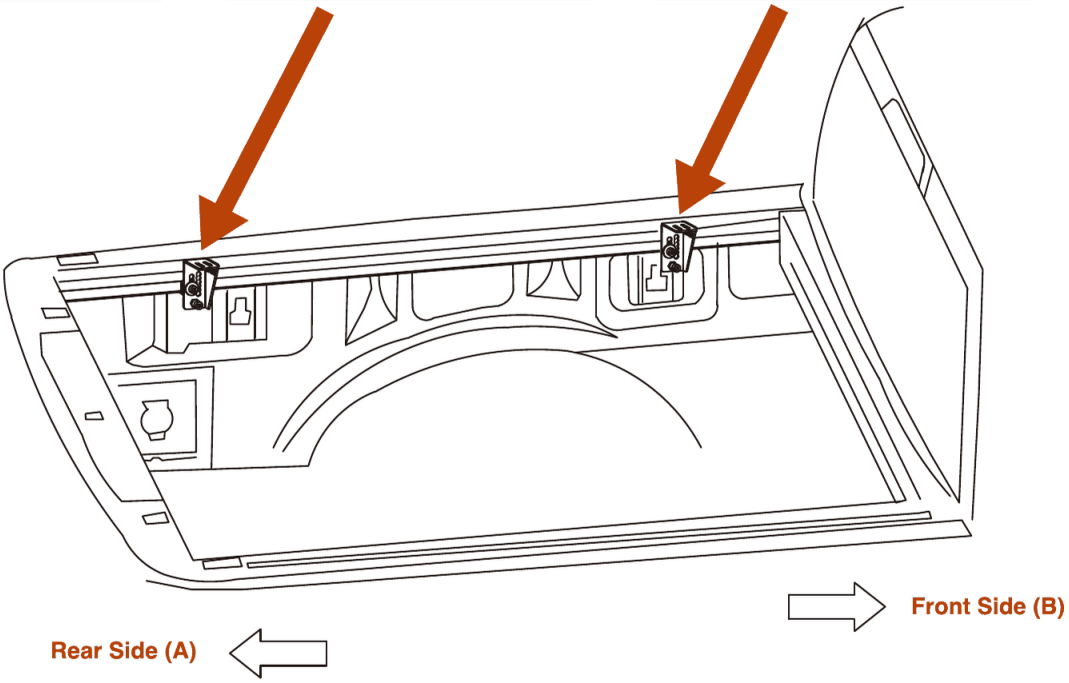

P4

For Nissan truck bed w/ deck rail

1. Install Clamp **F** onto deck rail. Use two clamps on each side and space evenly.

2. Detach the threaded backplate from bracket, insert (2) into each factory rail, then position the non-threaded backplate against the outer side of the factory rail.

3. Align Clamp **F** flush with the top edge of siderail **C**.


Secure the center bolt using Allen Key **E1**.


Install Rubber Grommet **E3** onto the lowest stabillizing screw and tighten.


4. Position clamp 4MM lower than bed siderail.


Secure center bolt using Allen Key **E1**.

Install Rubber Grommet **E3** onto the lowest stabillizing screw and tighten.

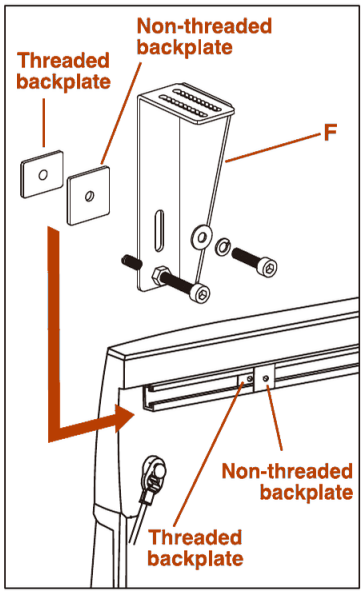

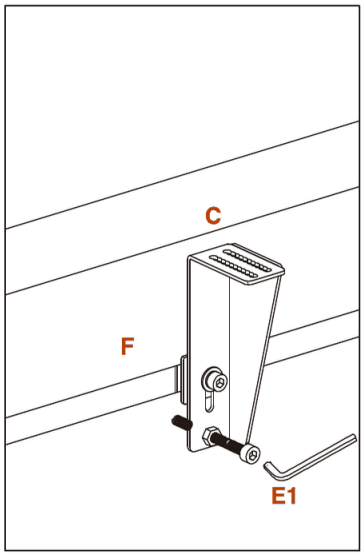

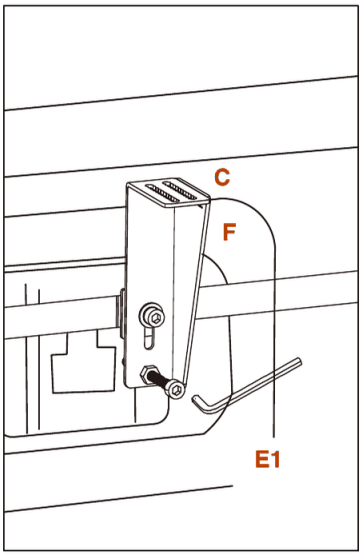


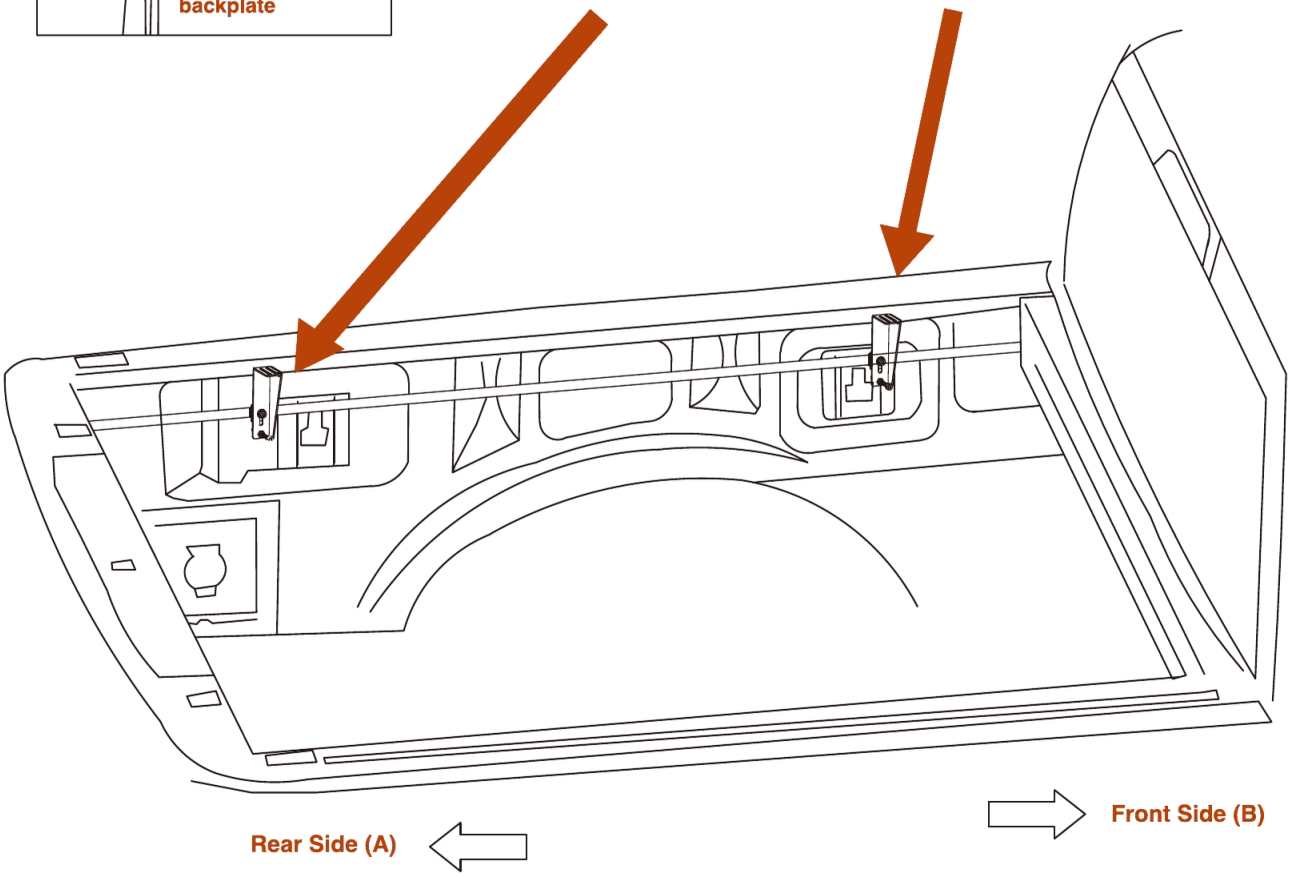

P5


STEP 3 Insert T-Bolts D1 into Rails K1 and K2

Insert two T-Bolts **D1** into the bottom side of the siderails **K**. Leave T-Blots **D1** loose for later adjustment.

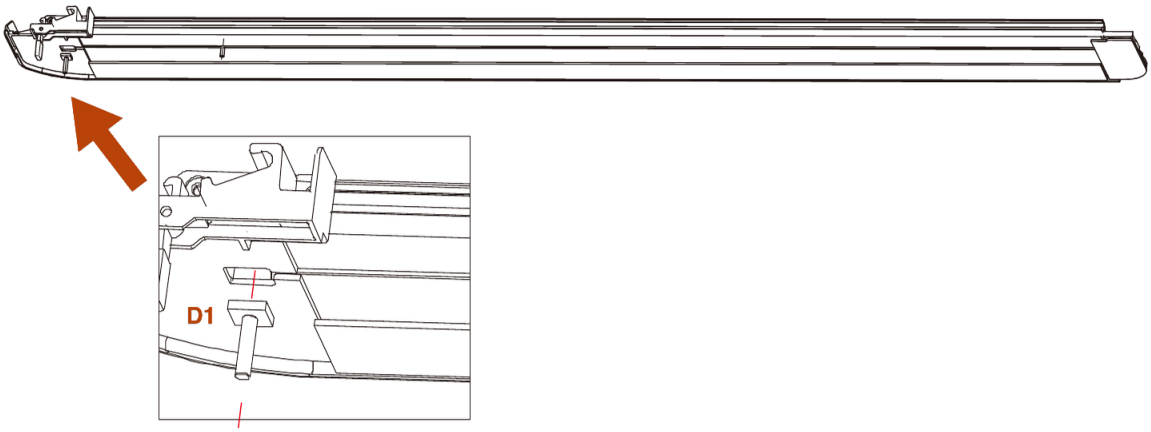


STEP 4 Place the Rails on the Truck Bed

Place **K1** driver-siderail and **K2** passenger-siderail on each side of the truck bed.

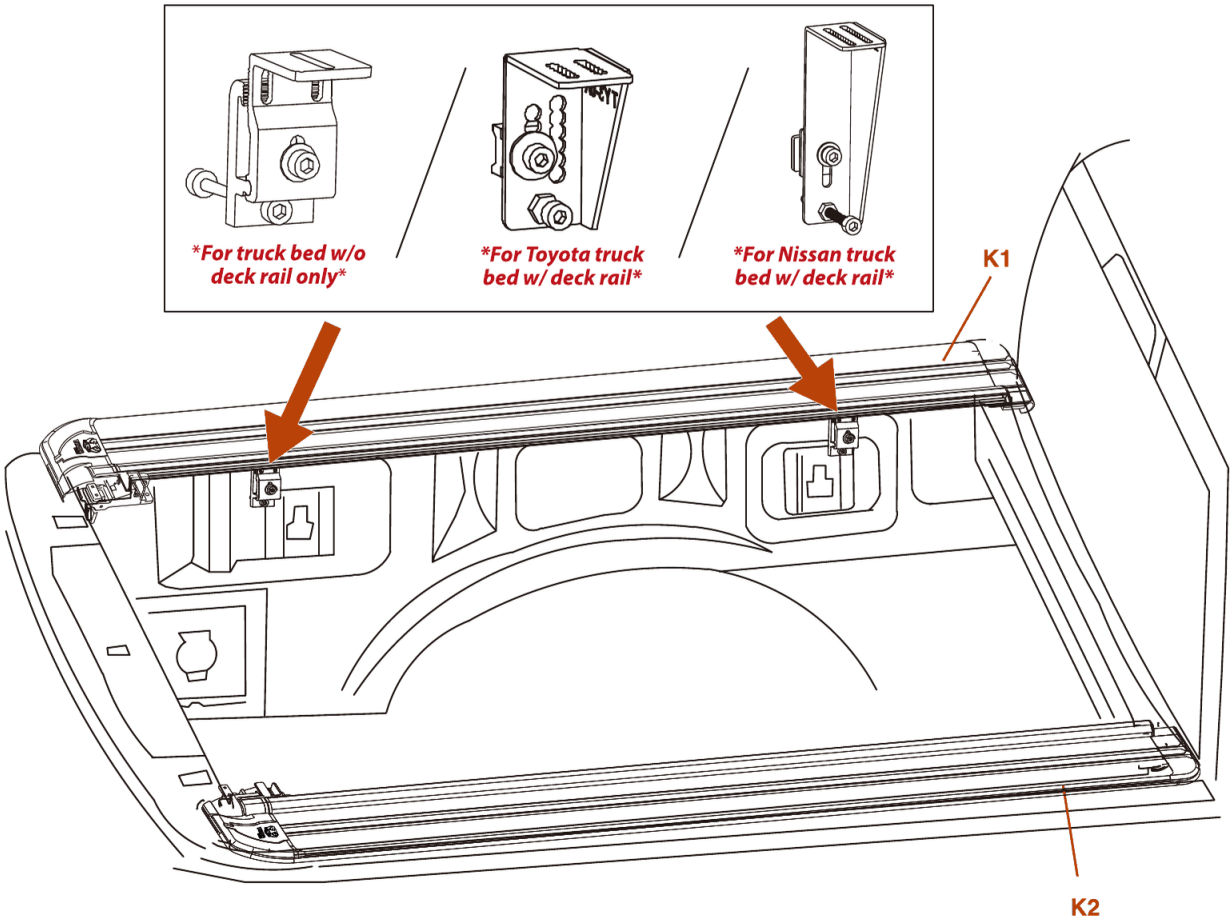

STEP 5 Install Cover Assembly L

1. Position the cover assembly **L** onto the bed.
2. Align metal bracket **L1** underneath cover assembly **L**. Insert the metal bracket **L1** into the groove **K2-1** on the rail **K2**.
3. Tighten bolt **H1** using wrench **H2** (Figure 3).

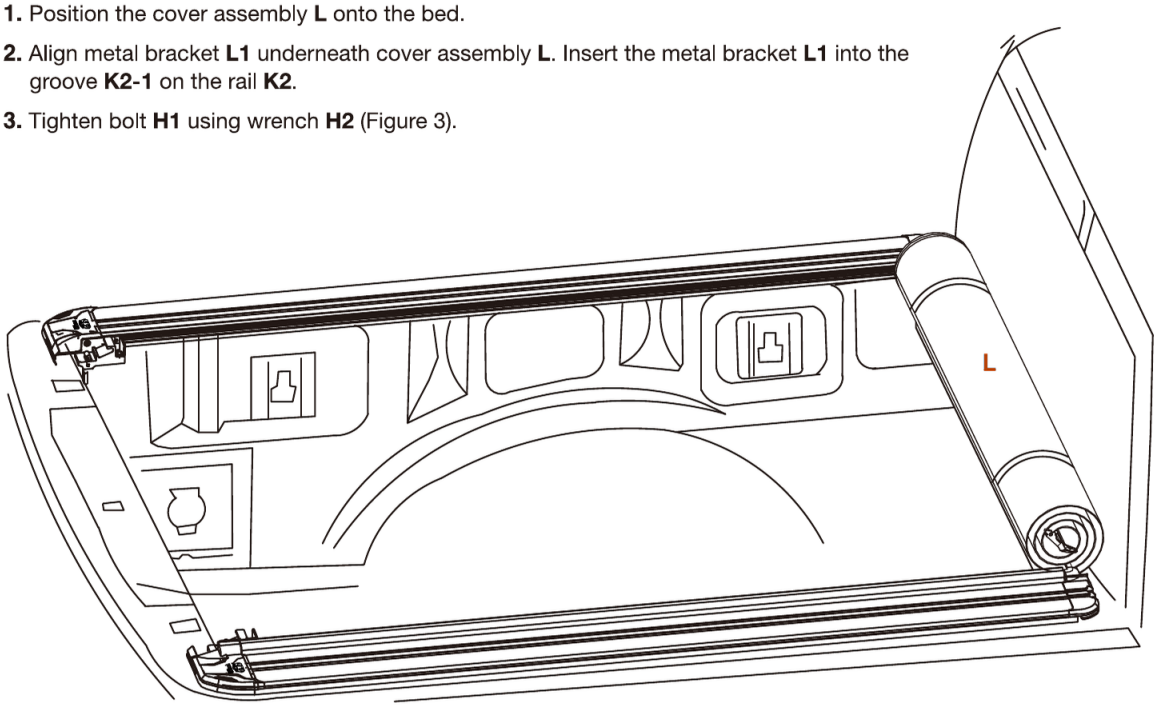

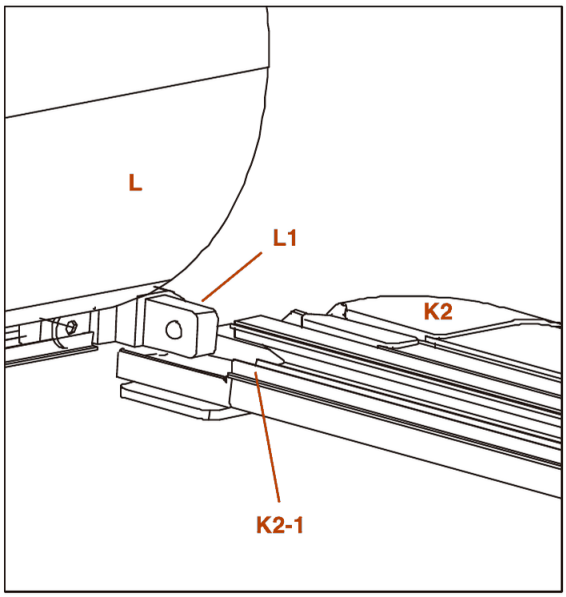


Figure 2


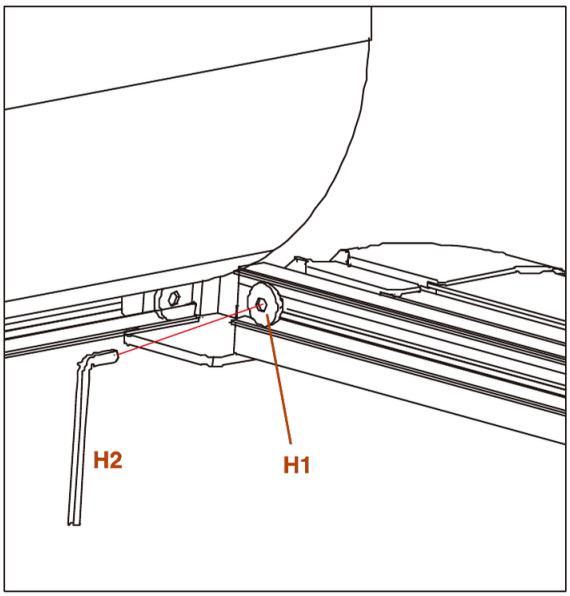


Figure 3


STEP 6 Fastening the Clamps


1. Insert the T-Bolts **D1** through the top side of Clamps **F**. Install the hardware stack (**D2**, **D3**, and **D4**) in sequence.

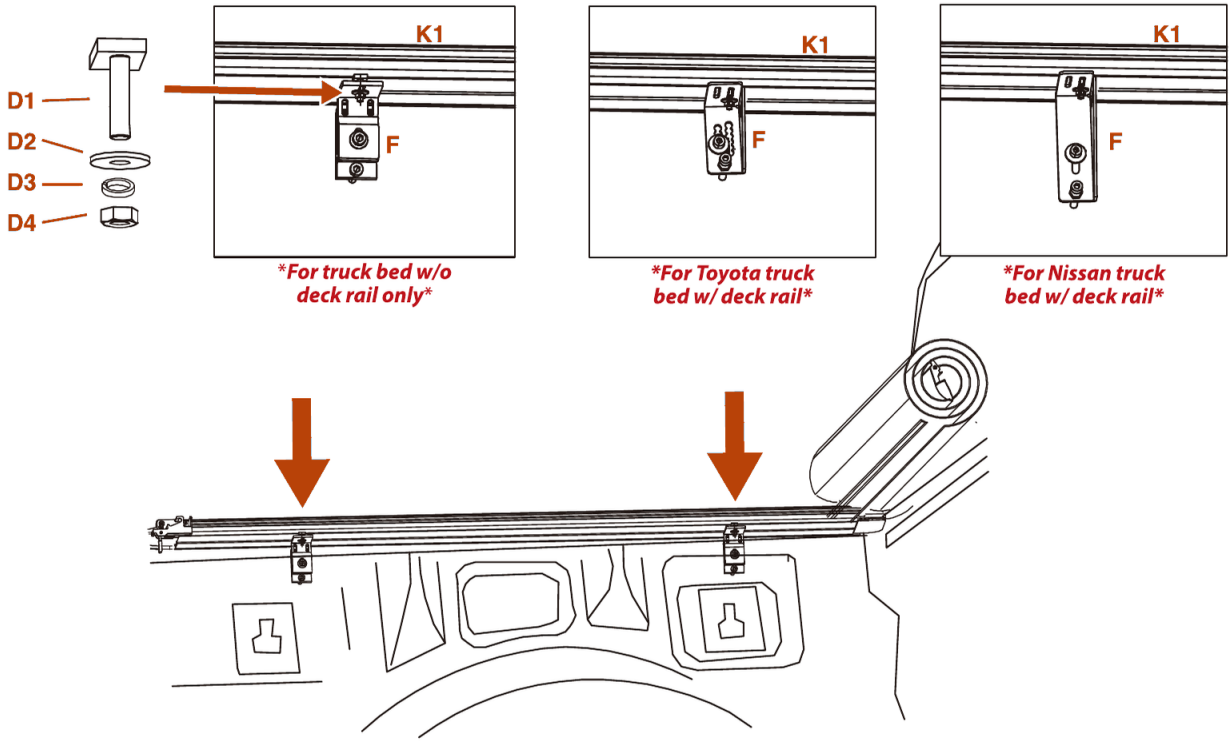

STEP 7 Cover Operation (Lock the bed cover)


Unlatch the retaining clips and unroll the soft cover. Position the rear panel **M** into pivot point **J3**. Press firmly on the center of the rear panel **M** until it fully engages and locks into place.

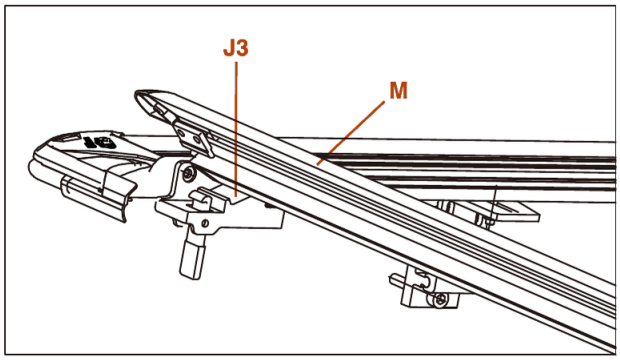


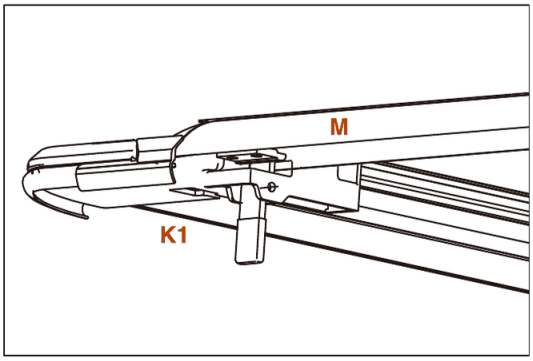

STEP 8 Secure the Bed Cover


1. To ensure a proper seal, lift the side of the cover and guide the **K2-2** rubber strip into the **K2-3** channel along the passenger-side rail.
2. Repeat the same step for the other side of the rail.

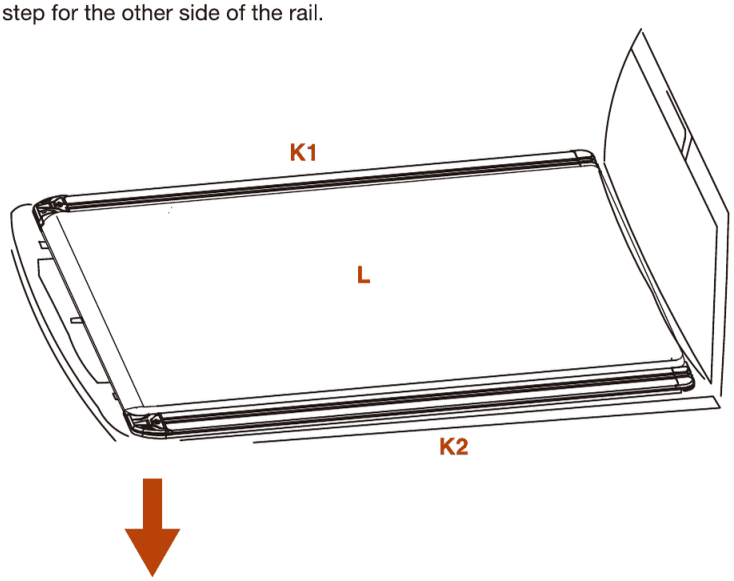

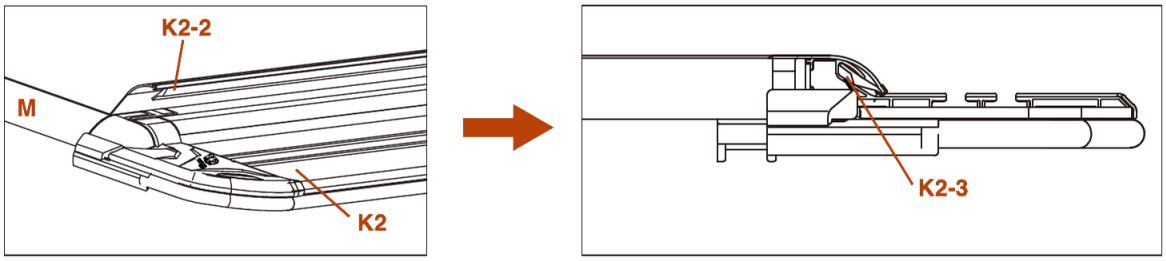

STEP 9 Cover Operation (Unlock the bed cover)


Pull the Handle **O** to open the rear panel **M**.

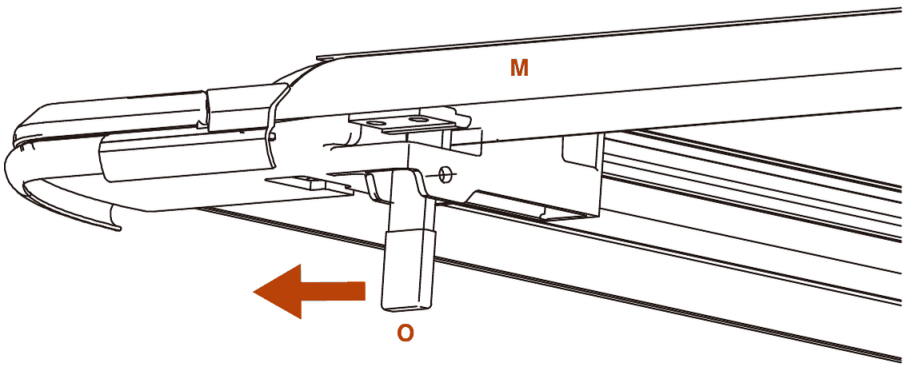


P9

STEP 10 Roll up the bed cover

1. Pull out the rubber strips on both siderails.
2. Roll the cover assembly **L** toward the bulkhead.

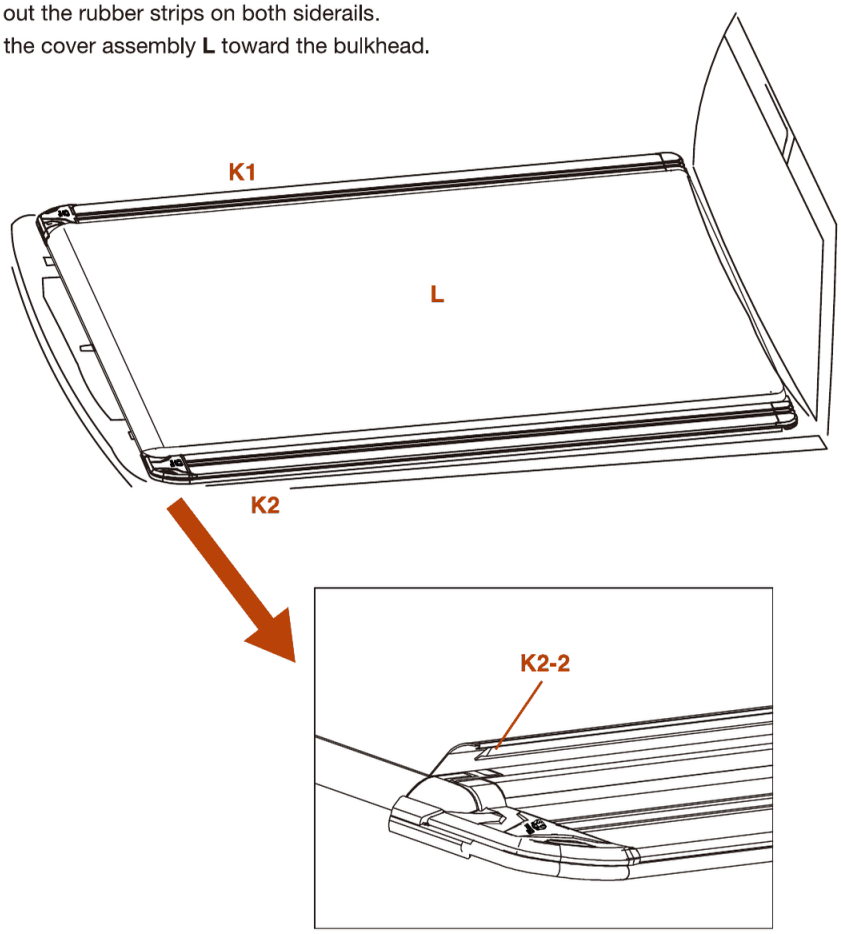

STEP 11 Fasten the Straps P around the Cover Assembly L

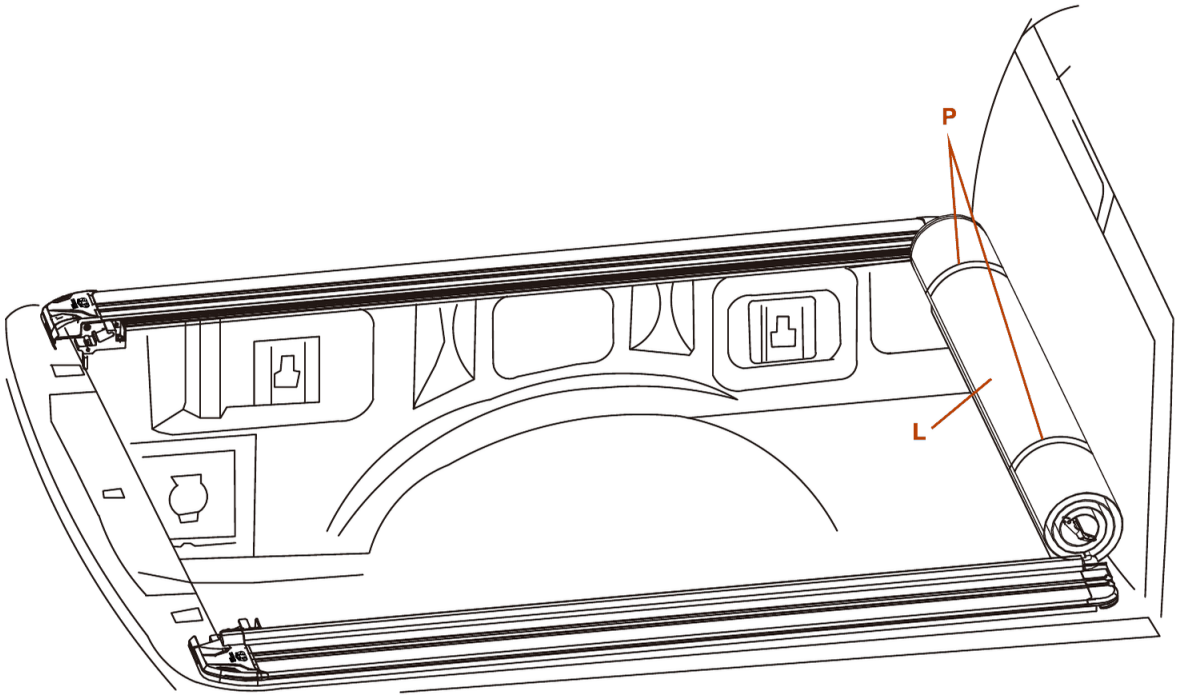

P11